





This document is subject to the Arms Export Control Act (22 U.S.C. 7228) and the International Traffic in Arms Regulations (22 C.F.R. Parts 120-130). A prior authorization or license from the U.S. State Department Directorate of Defense Trade Controls is required to export, re-export, re-transfer, or show this document to any foreign person whether in the United States or abroad.

SL HAND GUARDS

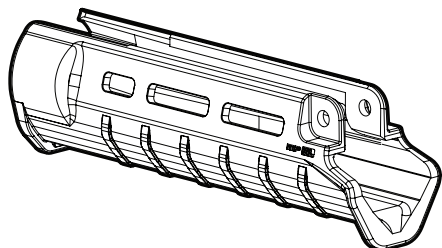

MAG1049 MAGPUL SL HAND GUARD - HK94/MP5 & CLONES

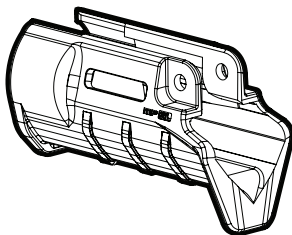


MAG1048 MAGPUL SL HAND GUARD - SP89/MP5K & CLONES

READ ALL INSTRUCTIONS BEFORE PROCEEDING TO AVOID LOSING ANY SMALL COMPONENTS


INSTALLATION INSTRUCTIONS

⚠ WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.

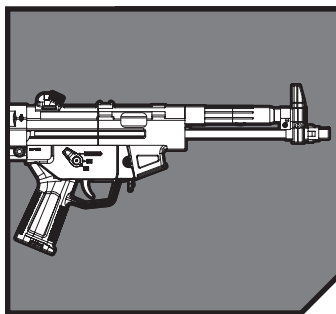

STEP 1: REMOVE EXISTING HAND GUARD


Remove the *existing hand guard* per firearm user manual.

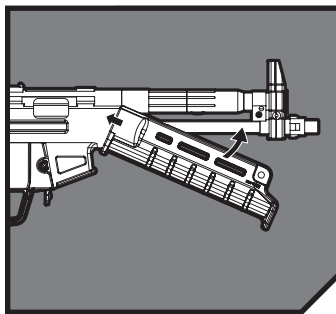

STEP 2: POSITION SL HANDGUARD

Position the *SL Hand Guard* directly below the barrel. Move the *SL Hand Guard* upwards and rearwards (away from the muzzle) until the *rear support tab* seats firmly against the forward portion of the receiver surrounding the barrel trunnion.

Note: When correctly installed, the rearmost edge of the *SL Hand Guard* will slide over the forward portion of the receiver surrounding the barrel trunnion by approximately 1 inch before the rear support tab makes engagement.

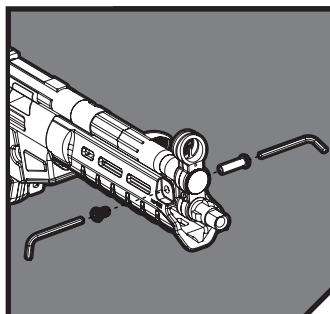


STEP 3: COMPLETE INSTALLATION

(A) Line up the fastener holes in the *SL Hand Guard* with the fastener holes in the cocking tube support hanger.
(B) Insert the *handguard binding post* from left to right (from the cocking handle side). Install the binding post screw, and tighten it to 15-20 in-lbs.

NOTE: It may be necessary to carefully use a non-marring tool such as a rubber mallet to lightly tap the *SL Hand Guard* rearward to line up the fastener holes due to manufacturing variations between firearms.

DO NOT force the fastener holes in the *SL Hand Guard* and cocking tube support hanger into alignment if they are grossly misaligned. Remove the *SL Hand Guard*, reference "Step 2: Position *SL Hand Guard*," and reinstall, ensuring that the *SL Hand Guard* is fully seated such that the rear support tab is engaged with the forward portion of the receiver surrounding the barrel trunnion.

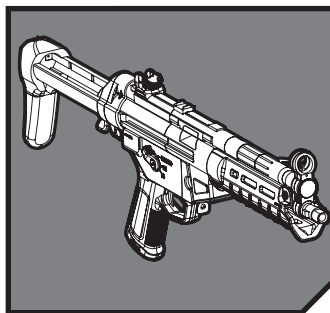

STEP 4: VERIFY INSTALLATION

Perform final inspection including function check per firearm user manual to verify proper weapon function.

Always test fire your weapon before using it in an operational environment.