





This document contains technology subject to the Export Administration Regulations (15 C.F.R. Parts 730-774). A prior authorization or license from the U.S. Department of Commerce, Bureau of Industry (and Security) (BIS) is required prior to the export, re-export, release, or transfer of this document to a non-U.S. person whether in the United States or abroad.

BTR or BSL BRACE

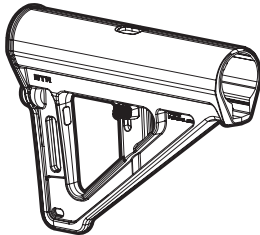

MAG1079 - MAGPUL BTR

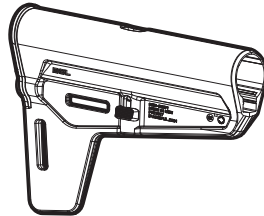

MAG1143 - MAGPUL BSL

INSTALLATION INSTRUCTIONS


! WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.

! WARNING

Only for use on Mil-Spec carbine receiver extension equipped AR Pistols. Not compatible with proprietary, pistol, or commercial receiver extensions. All ATF, NFA, state, and local rules and laws apply, where applicable.

ATF has ruled that attaching stabilizing braces with certain features will not make a firearm NFA controlled. This product conforms to this ATF precedent. As of December 10, 2019, ATF is no longer issuing classification letters for firearm accessories, including stabilizing braces.

This product is designed and intended to serve only as a forearm brace for the one-handed firing of a pistol. It is not intended to be fired from the shoulder. Any redesign or reconfiguration of this product may render the attached firearm NFA controlled. The user is exclusively responsible for determining the correct application of state and federal law based on the unique configuration of each firearm.

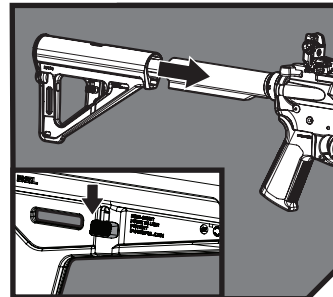

STEP 2: INSTALL BTR OR BSL BRACE


DO NOT FORCE PARTS TOGETHER! The BTR and BSL use a double spring to activate the actuator pin. Overcoming the first (lighter) spring allows adjustment of the brace position. Continued pressure beyond the tension of the first spring will encounter the noticeably stiffer second spring. Depressing the adjustment levers until they reach a hard stop will fully retract the actuator pin and allowing installation and removal of the brace

Align the brace body with the carbine receiver extension and gently slide together until the brace stops. Grasp both ends of the adjustment lever and pull down firmly, until reaching a hard stop (B). Maintain pressure on the adjustment lever and slide brace forward, and release pressure on adjustment lever to complete the installation.

NOTE: If the stock does not easily slide over receiver extension, refer to the fit guide in the box.

STEP 1: REMOVE EXISTING BRACE

If present, remove the existing brace per manufacturer instructions.

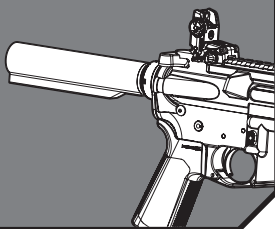

STEP 3: VERIFY INSTALL

Perform final inspection including function test per US Army TM 9-1005-319-23&P Unit and Direct Support Maintenance Manual to verify correct installation. If you experience any issues during installation, please refer to the "Related Info" tab located on the product page at www.magpul.com. Always test fire your weapon before using it in an operational environment.

