




This document is subject to the Arms Export Control Act (22 U.S.C. 7228) and the International Traffic in Arms Regulations (22 C.F.R. Parts 120-130). A prior authorization or license from the U.S. State Department Directorate of Defense Trade Controls is required to export, re-export, re-transfer, or show this document to any foreign person whether in the United States or abroad.


ACS™ STOCK INSTALL INSTRUCTIONS

! WARNING: BEFORE STARTING! MAKE SURE THE WEAPON IS UNLOADED. THE CHAMBER IS EMPTY. THE SAFETY IS ENGAGED.

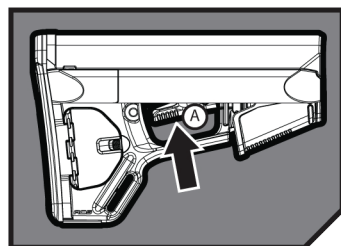

STEP 1: STOCK PREPARATION


Depress and hold the *Release Latch* (A) to disengage the *Friction Lock*. Continue holding the release latch for Step 2

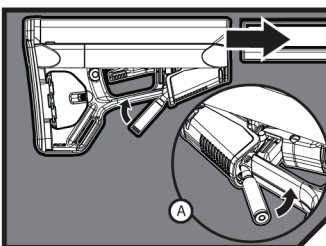

STEP 2: INSTALL ACS STOCK

Insert the tip of the included 5.56x45 *Dummy Round* into the recessed hole in the locking pin, located just above the *friction lock*. Use the round as a lever to pry down on the locking pin (A). Slide the ACS™ stock the rest of the way onto the receiver extension.


NOTE: If stock does not slide over receiver extension, refer to fit guide on box.

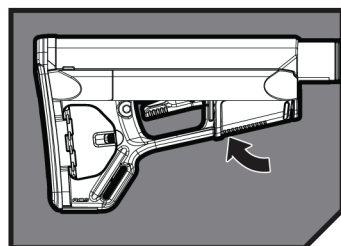

STEP 3: FRICTION LOCK TEST

With the Stock installed and secured in position, depress the *Friction Lock* to minimize movement.


NOTE: *Friction Lock* performance may vary depending on exact receiver extension size.

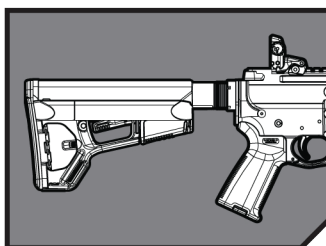

STEP 4: VERIFY INSTALL


Perform final inspection including function test per US Army TM 9-1005-319-23&P Unit and Direct Support Maintenance Manual to verify correct installation. If you experience any issues during installation, please refer to the "Related Info" tab, located on the product page at www.magpul.com. Always test fire your weapon before using it in an operational environment.

ACS™ STOCK FEATURES

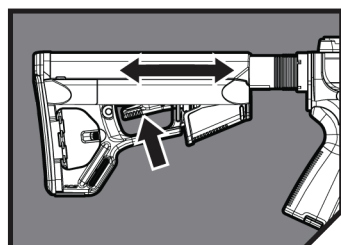


EXTEND/COLLAPSE STOCK

Fully depress the *Release Latch* and pull the stock rearward to extend or push stock forward to collapse. Intermediate positions may be selected by partially depressing the *Release Latch* and moving the stock back to the desired position. When desired position is found, re-engage *Friction Lock* for best results.

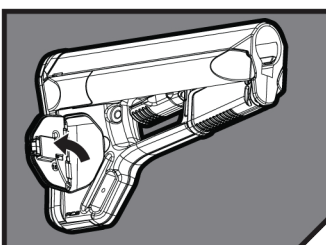

STORAGE COMPARTMENT

The ACS™ stock provides the user with an internal storage compartment. To open, slide latch toward the rear of the stock and pull open. To close, shut the door and press until the latch locks. (Note: the storage compartment is NOT waterproof)

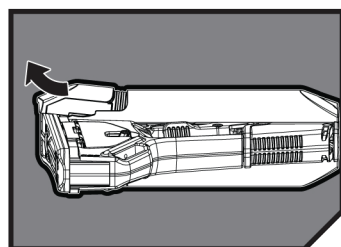

BATTERY STORAGE TUBES

To remove the *Battery Tube Plug*, pull rear of the plug away from the *Stock Body* and then pull the plug out of the tube. The plugs are tethered to minimize loss, so pull gently.

To close, first push the front of the plug in the tube, then push the rear into place making sure the tapered surface is facing out.