



AFG[®] Angled Fore Grip

⚠ WARNING


BEFORE STARTING! MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY & THE SAFETY IS ENGAGED.



READ ALL INSTRUCTIONS BEFORE PROCEEDING TO AVOID LOSING ANY SMALL COMPONENTS.




AFG INSTALLATION INSTRUCTIONS

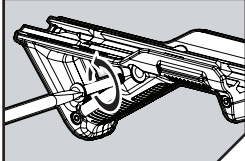

STEP 1: REMOVE SLOTTED SCREW

Using a *flat-head screwdriver*, loosen and completely remove the 10-24 Slotted Screw. If you want to change the *Finger Shelf*, see "Step A" before continuing.


NOTE: After removing the 10-24 Screw, the 10-24 Hex Nut on the opposite side will be loose. Take care not to lose the Nut.

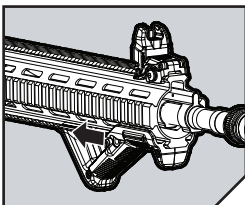

STEP 2: POSITION AFG ON RAIL

After the 10-24 Slotted Screw is removed, slide the AFG onto the rail, making sure there is a clear path for the *Slotted Screw* in Step 3. If the AFG is too snug to slide easily over the rail, use a 7/64" hex key to loosen the two (2) 6-32 x 5/8" Socket Head Cap Screws.


⚠ WARNING: Install AFG so it is entirely mounted on the handguard with the front of the fore-grip at least 3" rearward of the muzzle. Failure to do so may result in serious injury, burns, or loss of digits.

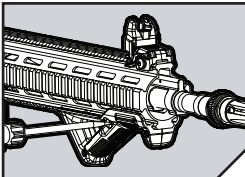

STEP 3: INSTALL AND TIGHTEN SLOTTED SCREW

When desired position is reached, reinstall the 10-24 Slotted Screw and tighten with a *flat-head screwdriver*. Retighten the two (2) Socket Head Cap Screws to 8-10 inch-lbs with a 7/64" hex key if loosened in Step 2.

NOTE: Take care to not over tighten screws. Over tightening may result in damage to the AFG.

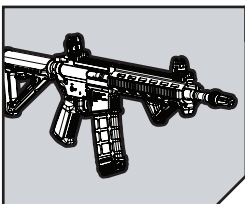


STEP 4: VERIFY INSTALLATION


Perform final inspection including a function check per US Army TM 9-1005-319-23&P (3-18) Unit and Direct Support Maintenance Manual to verify correct installation.

If you experience any issues during installation, please go online to www.magpul.com for further information.

Always test fire your weapon before using it in an operational environment.

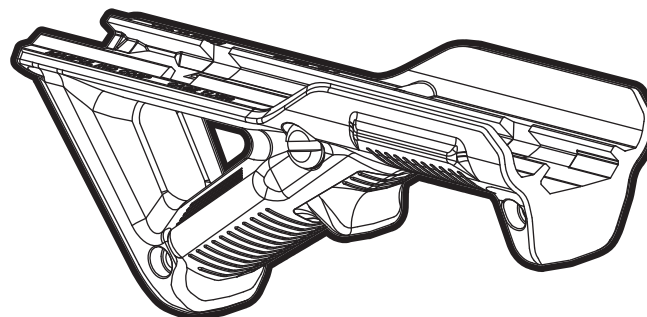


AFG FINGER SHELF INSERT INSTALL INSTRUCTIONS

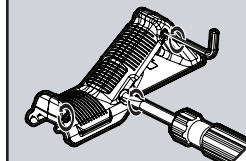

STEP A: REMOVE ALL THREE (3) SCREWS


NOTE: Remove AFG from weapon before proceeding.

Using a *flat-head screwdriver* remove the 10-24 Slotted Screw. Once the Slotted Screw is removed, use a 7/64" hex key to remove the remaining two (2) 6-32 x 5/8" Socket Head Cap Screws.

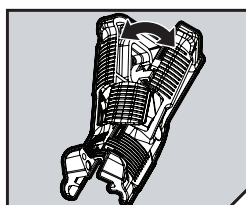


STEP B: SEPARATE TWO HALVES

Holding the AFG upside-down, "fold" the two halves outward to disengage locking mechanism, then pull apart. Use care not to lose the Insert.

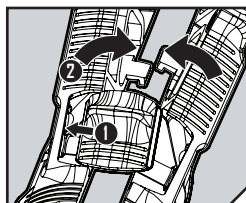

STEP C: POSITION INSERT

There are two (2) Inserts included with the AFG. The *Finger Shelf Insert* and the *Straight Insert*. To install, place the Insert into the appropriate groove. Each Insert may be installed in either direction to optimize the fore-grip for user preference. After installing the desired Insert, hook the *Locking Tabs* into the appropriate slots and "fold" inward. Hold and continue to Step D.

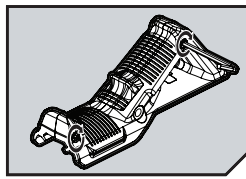

STEP D: RETIGHTEN SOCKET HEAD SCREWS

While holding the 2 halves together, insert the two (2) 6-32 x 5/8" Socket Head Cap Screws and tighten using a 7/64" hex key to 8-10 inch-lbs.

NOTE: Take care to not over tighten the Socket Head Cap Screws. Over tightening may result in damage to the AFG.

After this is complete, proceed to Step 2 on the Install Instructions.