



MOE[®] SL GRIP




WARNING

BEFORE STARTING! MAKE SURE THE WEAPON IS UNLOADED,
THE CHAMBER IS EMPTY & THE SAFETY IS ENGAGED.



READ ALL INSTRUCTIONS BEFORE PROCEEDING
TO AVOID LOSING ANY SMALL COMPONENTS.

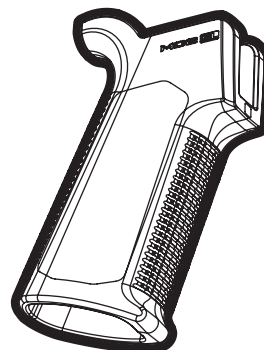


MOE

MOE SL GRIP INSTALLATION INSTRUCTIONS


STOP

IMPROPER INSTALLATION AND/OR IMPROPER
USE OF THIS PRODUCT MAY CAUSE WEAPON
MALFUNCTION. WEAPON MALFUNCTION MAY
CAUSE SERIOUS INJURY, INCLUDING GRIEVOUS
BODILY HARM AND/OR DEATH.

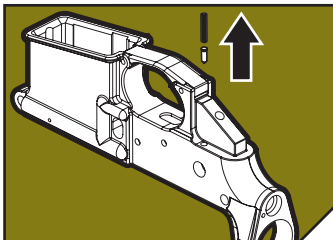


STEP 1: REMOVE ORIGINAL GRIP

Turn rifle upside down. Remove original grip
per armory guidelines, taking care not to lose
the fire control selector/safety detent parts held
in place by the grip. Remove selector spring,
leaving the selector detent in place.

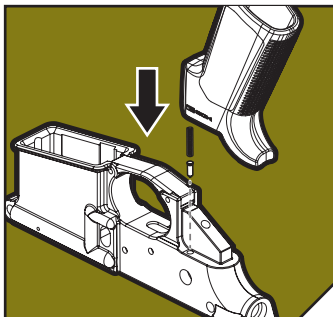


STEP 2: POSITION GRIP

Verify selector detent is in the receiver and
install selector spring in the Grip Body right
side top hole. Fit MOE SL Grip onto lower
receiver, making sure the selector spring
engages the receiver hole without binding.

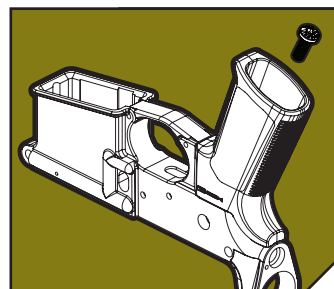

STEP 3: INSTALL MOE SL GRIP

Using a flat-head screw driver or 3/16" hex
wrench, install the supplied Dual-Drive Screw
through the hole and hand tighten to receiver.
A locking compound is factory applied to
prevent loosening. **DO NOT re-use original
mounting screw/lock washer.**

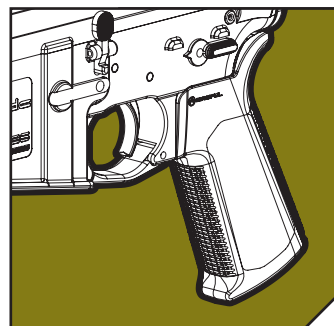

STEP 4: VERIFY INSTALL

▲ IMPORTANT: Test safety selector and
general function prior to firing.

Perform final inspection including function check
per *US Army TM 9-1005-319-23&P Unit and
Direct Support Maintenance Manual (3-97)* to
verify proper weapon function.

**Always test fire your weapon before using it in
an operational environment.**