





PMAG[®] GEN M3 LR/SR Ranger Plate[™]

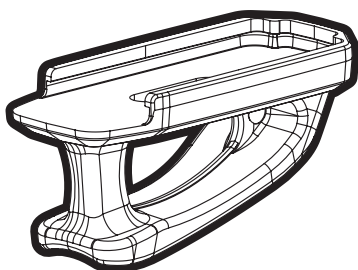

- ⚠ WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.**
- ⚠ CAUTION: PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING. COMPONENTS UNDER SPRING PRESSURE MAY EJECT FORCEFULLY AND COULD CAUSE INJURY.**
- ⚠ WARNING: OBSERVE SAFE FIREARM HANDLING PRACTICES AT ALL TIMES. FAILURE TO DO SO MAY RESULT IN SERIOUS BODILY INJURY OR DEATH. MAGPUL INDUSTRIES SHALL NOT BE RESPONSIBLE FOR INJURY, DEATH OR PROPERTY DAMAGE RESULTING FROM FAULTY INSTALLATION, MISUSE, ILLEGAL USE, OR MODIFICATION OF THIS PRODUCT.**


PMAG RANGER PLATE INSTALL/REMOVAL

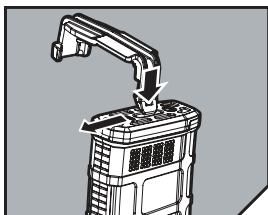

STEP 1: FLOOR PLATE REMOVAL

Using an *Impact/Dust Cover* tail or bullet tip, depress *Floor Plate Lock Tab* and slide *Floor Plate* rearward and off *PMAG* magazine body.

Note: *Floor Plate Lock Tab* is under pressure, and must be depressed far enough in to unlock *Floor Plate*.

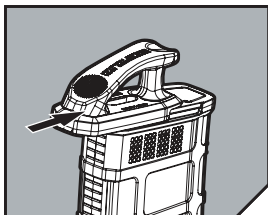


STEP 2: RANGER INSTALLATION

Compress *Lock Plate* and *spring* inside *PMAG* body. Starting from the rear of the *magazine body*, slide *Ranger* onto the *PMAG* until *Floor Plate Lock Tab* “clicks” into place.

Warning: *Failure to fully lock Ranger Plate in place may cause serious weapon failure.*

Attention: *Check magazine function via live fire test prior to tactical deployment.*

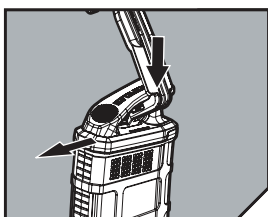

RANGER REMOVAL

Using a *Impact/Dust Cover* tail or bullet tip, depress the *Floor Plate Lock Tab* and slide *Ranger Plate* rearward and off *magazine body*.

Note: *Floor Plate Lock Tab* is under pressure, and must be depressed far enough down to unlock *Ranger*.