



AK MAGLINK[®]




WARNING


BEFORE STARTING! MAKE SURE THE WEAPON IS UNLOADED,
THE CHAMBER IS EMPTY & THE SAFETY IS ENGAGED.



READ ALL INSTRUCTIONS BEFORE PROCEEDING
TO AVOID LOSING ANY SMALL COMPONENTS.

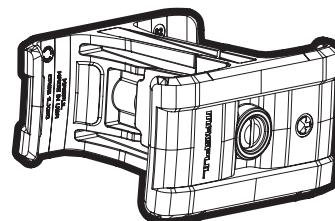


MAGLINK[®] INSTALLATION AND USAGE INSTRUCTIONS

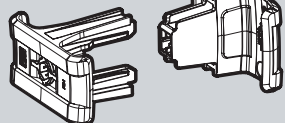

STEP 1: SEPARATE MAGLINK


Separate halves of AK Maglink. The rear half of the AK Maglink is labeled with the Magpul logo and text. The front half has the Maglink logo and AK text.

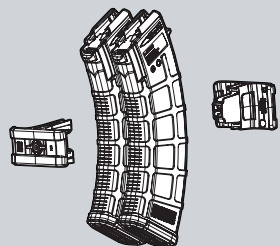


STEP 2: ALIGN MAGAZINES

Ensuring both PMAGs are parallel to each other, fit the front edge of each magazine into the front half of the Maglink along the center rib of the magazines. Install the back half of the Maglink, ensuring that the magazine ribs also engage the slots in the back half of the Maglink.

OFFSET

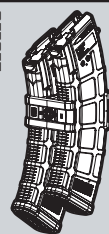


JUNGLE CLIP

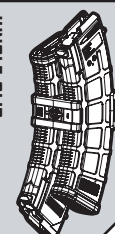

STEP 3: OFFSET MAGAZINES

If it becomes necessary to offset the magazines, ensure the magazine on the left is set higher than the magazine on the right. Also possible to "Jungle Clip".

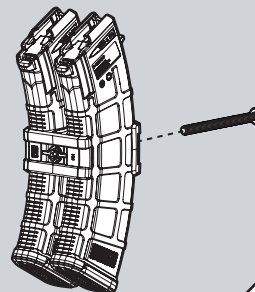

STEP 4: FINISH INSTALLATION

Insert the Slotted Pan-head Screw and tighten using a flat head screwdriver, being sure not to overtighten.

Caution: Overtightening may cause damage to the Maglink or Magazines.