Round Limiter

PMAG® LR/SR GEN M3




⚠ WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.

⚠ CAUTION: PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING. COMPONENTS UNDER SPRING PRESSURE MAY EJECT FORCEFULLY AND COULD CAUSE INJURY.

⚠ WARNING: OBSERVE SAFE FIREARM HANDLING PRACTICES AT ALL TIMES. FAILURE TO DO SO MAY RESULT IN SERIOUS BODILY INJURY OR DEATH. MAGPUL INDUSTRIES SHALL NOT BE RESPONSIBLE FOR INJURY, DEATH OR PROPERTY DAMAGE RESULTING FROM FAULTY INSTALLATION, MISUSE, ILLEGAL USE, OR MODIFICATION OF THIS PRODUCT.


INSTALLATION INSTRUCTIONS

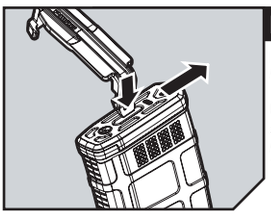

REMOVE FLOOR PLATE


CAUTION: CONTENTS UNDER SPRING PRESSURE! USE CARE TO AVOID INJURY OR PART LOSS.

Using the tail of the *Impact/Dust Cover* or the *tip of a round*, depress the *Lock Tab* in the center of the *Floor Plate*. While maintaining pressure on the *Lock Tab*, slide the *Floor Plate* rearward.

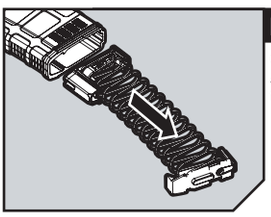

REMOVE SPRING ASSEMBLY


Once the *Floor Plate* is free, slide the *Spring Assembly (Lock Plate, Spring, and Follower)* out of the *Magazine Body.*

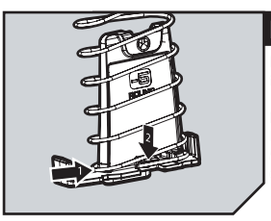

REPLACE LOCK PLATE WITH LIMITER


Remove the existing *Lock Plate* by unclipping it from the *Spring*.

Install with the *Minus 5 or Minus 10 Round Limiter* hooking the *Magazine Spring* on the front lip of the *Round Limiter Lock Plate* (1), then press the *spring caps* into the appropriate slots (2).

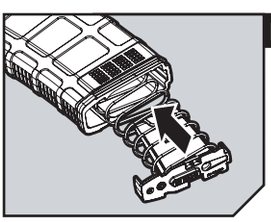

REINSTALL SPRING ASSEMBLY

Once the *Round Limiter* is secure on the *Spring*, re-insert the *Spring Assembly (Round Limiter, Spring, and Follower)*, compress and hold in place. Take care not to entangle spring and limiter when reinserting the *spring* assembly.

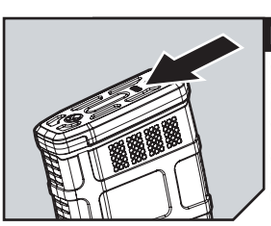

REINSTALL FLOOR PLATE & VERIFY

While keeping the *Spring Assembly* compressed, slide the *Floor Plate* back onto the *Magazine*, making sure the *Floor Plate Lock Tab* seats correctly with an audible ***click***.

Verify installation and perform final inspection, including a function test per U.S. Army T.M. 05588C-10/1A(41-42).