
MOE™ AK Ranger Plate™

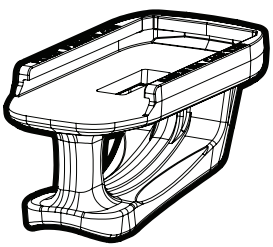


⚠ WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.

⚠ CAUTION: PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING. COMPONENTS UNDER SPRING PRESSURE MAY EJECT FORCEFULLY AND COULD CAUSE INJURY.

⚠ WARNING: OBSERVE SAFE FIREARM HANDLING PRACTICES AT ALL TIMES. FAILURE TO DO SO MAY RESULT IN SERIOUS BODILY INJURY OR DEATH. MAGPUL INDUSTRIES SHALL NOT BE RESPONSIBLE FOR INJURY, DEATH OR PROPERTY DAMAGE RESULTING FROM FAULTY INSTALLATION, MISUSE, ILLEGAL USE, OR MODIFICATION OF THIS PRODUCT.


PMAG RANGER PLATE INSTALL/REMOVAL

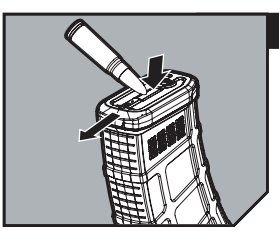

STEP 1: FLOORPLATE REMOVAL

Using a straight edge or bullet tip, depress *Floor Plate Lock Tab* and slide *Floor Plate* rearward and off *PMAG AK* magazine body.

Note: Lock Plate is under pressure, and must be depressed far enough in to unlock floor plate.

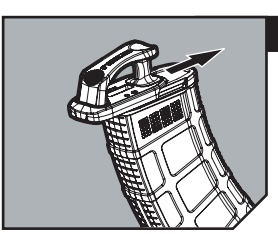


STEP 2: AK RANGER INSTALLATION

Compress *Lock Plate* and spring inside *PMAG* body. Starting from the rear of the magazine body, slide *AK Ranger* onto the *PMAG AK* until *Lock Plate Tab* "clicks" into place.

Warning: Failure to fully lock Ranger Plate in place may cause serious weapon failure.

Attention: Check magazine function via live fire test prior to operational use.

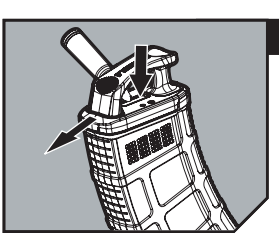

RANGER REMOVAL

Using a straight edge or bullet tip, depress the *Floor Plate Lock Tab* and slide *AK Ranger Plate* rearward and off *PMAG AK* magazine body.

Note: Floor Plate Lock Tab is under pressure, and must be depressed far enough down to unlock AK Ranger.