RVG® M-LOK™ ADAPTER RAIL

Polymer Adapter Rail for M-LOK Compatible Systems

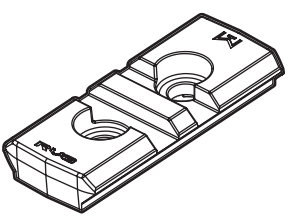

⚠ **WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.**

⚠ **CAUTION: PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING. COMPONENTS UNDER SPRING PRESSURE MAY EJECT FORCEFULLY AND COULD CAUSE INJURY.**

⚠ **WARNING: OBSERVE SAFE FIREARM HANDLING PRACTICES AT ALL TIMES. FAILURE TO DO SO MAY RESULT IN SERIOUS BODILY INJURY OR DEATH. MAGPUL INDUSTRIES SHALL NOT BE RESPONSIBLE FOR INJURY, DEATH OR PROPERTY DAMAGE RESULTING FROM FAULTY INSTALLATION, MISUSE, ILLEGAL USE, OR MODIFICATION OF THIS PRODUCT.**

INSTALLATION INSTRUCTIONS

STEP 1: Install RVG M-LOK Adapter Rail to M-LOK Surface

Utilizing the *M-LOK mounting system*, align the *Adapter Rail* to desired mounting position and install it flush with the mounting surface. Secure the *M-LOK Screws* using a *1/8" hex wrench.* See enclosed *M-LOK Accessory Instruction Sheet for detailed M-LOK instructions. (072-0087)*

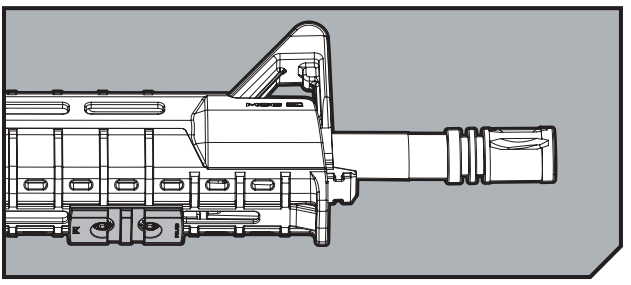

NOTE: The *RVG M-LOK Adapter Rail* is lower profile than a standard height Picatinny rail and may not work with other accessories.

STEP 2: Install the RVG

Using a *flat-head screwdriver or 1/8" hex wrench* remove the *10-24 Dual Drive Screws* from the *RVG*. When removed, place the *RVG* on the *M-LOK Adapter Rail*, making sure to align a clear path for the *Dual Drive Screws*. Align the rail clamp on the opposite side. When desired position is reached, reinstall the *10-24 Dual Drive Screws* and tighten with a *flat-head screwdriver or 1/8" hex wrench*.

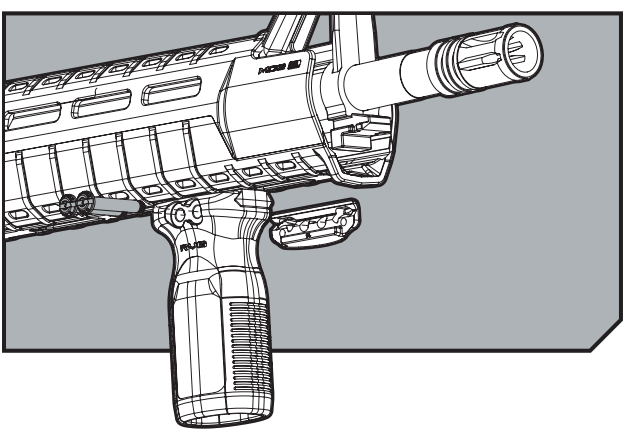

⚠ **WARNING:** Take care to not over tighten screws. Over tightening may result in damage to the RVG.

STEP 3: Verify Installation

Perform final inspection including function check per **US Army TM 9-1005-23&P Unit and Direct Support Maintenance Manual (3-97)** to verify proper weapon function.

Always test fire your weapon before using it in an operational environment.

