




This document contains technology subject to the Export Administration Regulations (15 C.F.R. Parts 730-774). A prior authorization or license from the U.S. Department of Commerce, Bureau of Industry and Security (BIS) is required prior to the export, re-export, release, or transfer of this document to a non-U.S. person whether in the United States or abroad.

XTM[®] HAND STOP KIT INSTRUCTIONS


! WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.

Required Tools: 1/8" hex key

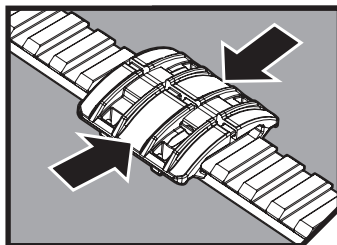


INSTALLATION

XTM Enhanced Panel halves are identical – there are no right or left pieces. Place two *XTM Enhanced Panel* halves on the appropriate section of rail, and push panel halves together, making sure *Locking Tabs* engage the appropriate slots on the opposite panel half. If installed correctly, the panel halves will lock tightly together, and cannot be unintentionally separated or removed (see removal instructions.)

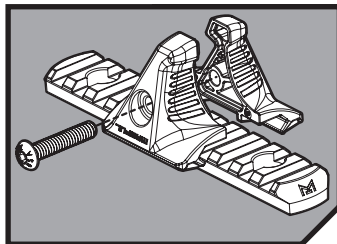

HAND STOP INSTALLATION

Place two *XTM Hand Stop Panel* halves on the appropriate section of rail, align panel halves, screw, and nut, then tighten panel halves together.

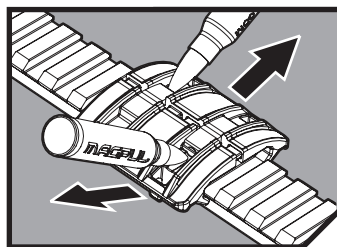

SEPARATION AND REMOVAL

WARNING: DO NOT USE KNIFE BLADES OR OTHER SHARP TOOLS TO REMOVE THE XTM ENHANCED PANELS, AS THIS CAN CAUSE SERIOUS INJURY!

Using the tips of two 5.56 NATO rounds (or similar non-sharp tool), push inward while prying upward on two opposite-sided *Locking Tabs*. The two *XTM Enhanced Panel* halves should begin to separate, allowing for easy removal and separation by hand.