



M-LOK™ TYPE 1 COVER

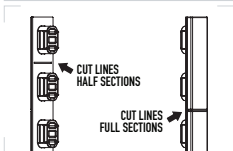


STEP 1: PREPARE

Clear the *M-LOK* slots on weapon and pre-measure the *M-LOK Rail Cover Type 1* to the desired length. Covers may be trimmed to length at indicated marks.

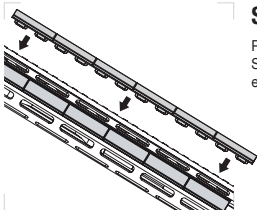

STEP 2: INSTALLATION

Press the cover into the desired *M-LOK* slots. Start on one end and press in one lug at a time for easiest installation.

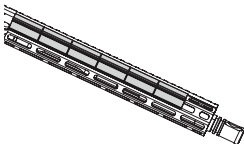

VERIFY INSTALLATION

Perform final inspection including function check per **US Army TM 9-1005-23&P Unit and Direct Support Maintenance Manual (3-97)** to verify proper weapon function.

Always test fire your weapon before using it in an operational environment.

U N F A I R A D V A N T A G E .

- ⚠ WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.**
- ⚠ WARNING: OBSERVE SAFE FIREARM HANDLING PRACTICES AT ALL TIMES. FAILURE TO DO SO MAY RESULT IN SERIOUS BODILY INJURY OR DEATH. MAGPUL INDUSTRIES SHALL NOT BE RESPONSIBLE FOR INJURY, DEATH OR PROPERTY DAMAGE RESULTING FROM FAULTY INSTALLATION, MISUSE, ILLEGAL USE, OR MODIFICATION OF THIS PRODUCT.**