



MOE[®] SL AK GRIP




WARNING

BEFORE STARTING! MAKE SURE THE WEAPON IS UNLOADED,
THE CHAMBER IS EMPTY & THE SAFETY IS ENGAGED.



READ ALL INSTRUCTIONS BEFORE PROCEEDING
TO AVOID LOSING ANY SMALL COMPONENTS.

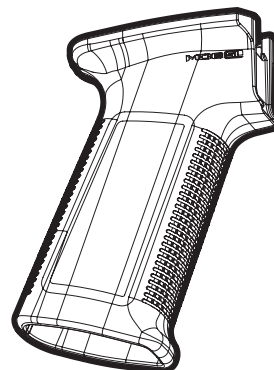


MOE SL

MOE SL AK GRIP INSTALLATION INSTRUCTIONS




IMPROPER INSTALLATION AND/OR IMPROPER
USE OF THIS PRODUCT MAY CAUSE WEAPON
MALFUNCTION. WEAPON MALFUNCTION MAY
CAUSE SERIOUS INJURY, INCLUDING GRIEVOUS
BODILY HARM AND/OR DEATH.

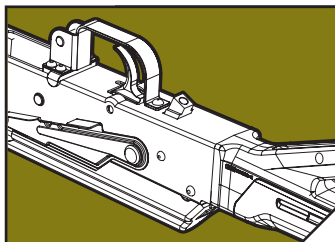


STEP 1: REMOVE ORIGINAL GRIP

Turn rifle upside down. Remove original grip per
armory guidelines. Take note of *t-nut* position in
receiver.

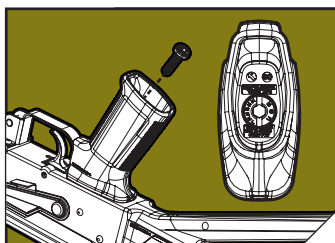

STEP 2: INSTALL GRIP

Position *t-nut* in receiver. Fit MOE SL AK Grip
onto receiver. Using either a flat-head screw
driver or a 3/16" hex wrench, install the supplied
dual drive screw through the front hole and
tighten.

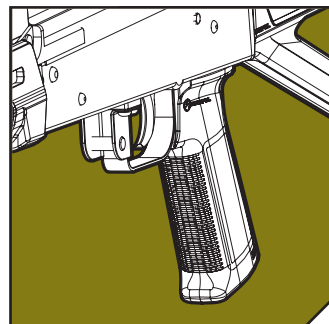

STEP 3: VERIFY INSTALL

Perform final inspection including function check
to verify proper weapon function.

*Always test fire your weapon before using it in
an operational environment.*